


INSTRUCTIONS FOR ATTACHING FEET TO YOUR FURNITURE

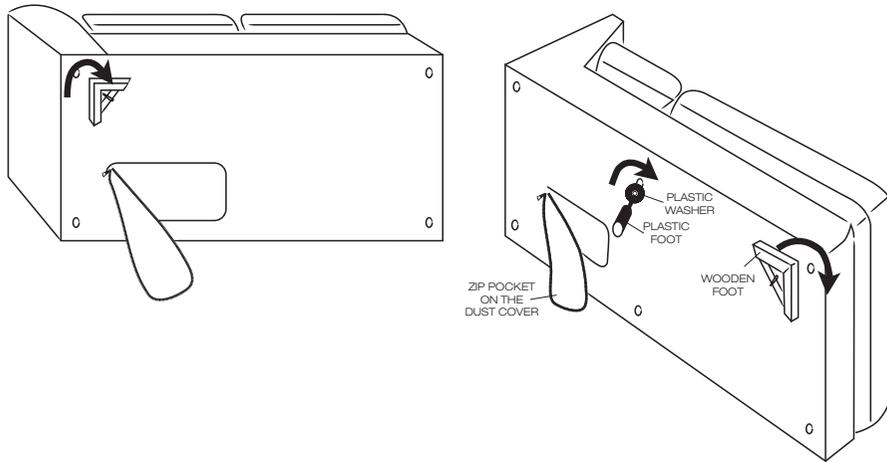

Your furniture is shipped with the feet removed to prevent damage. You will need to attach the feet to your furniture by following the steps set out below:

STEP 1

Place a protective cover on a flat surface.

STEP 2

Carefully roll the furniture on to its back (as shown in the illustrations) and locate the feet by unzipping the zipper in the dust cover. Remove the feet from the protective packaging.

STEP 3

Screw the feet into the holes as shown in the diagrams. Be careful not to over-tighten the feet as this may damage the furniture.

STEP 4

Carefully roll the furniture back on to its feet once they are all attached.

SPECIAL NOTES - IMPORTANT


There is one round plastic foot supplied which must be fitted as per the instructions. This foot supports the frame rail and not fitting it may cause the rail to bend.

Be sure to attach the plastic washer to all feet before screwing them into the holes. The washers secure the feet avoiding damage to the structure of your furniture.

In the bottom of each wooden foot is a plastic glide. Please check this for any fault or damage prior to rolling the furniture back onto its feet. If there is any sign of damage or any sharp surfaces you may risk scratching your floor. These glides are easily replaced if they become damaged and are readily available at most hardware stores. Damage caused to floors is not covered by your warranty.

Be sure to fit all feet to avoid compromising the structure of the lounge.

INSTRUCTIONS FOR ATTACHING FEET TO YOUR FURNITURE

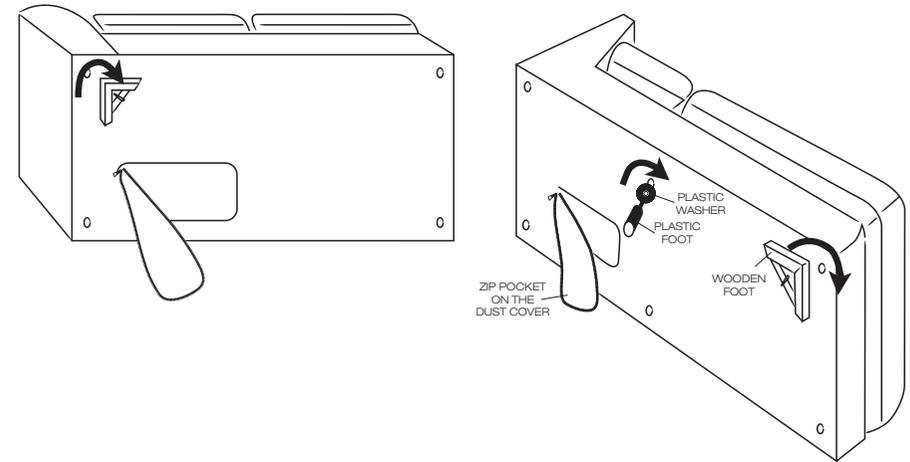

Your furniture is shipped with the feet removed to prevent damage. You will need to attach the feet to your furniture by following the steps set out below:

STEP 1

Place a protective cover on a flat surface.

STEP 2

Carefully roll the furniture on to its back (as shown in the illustrations) and locate the feet by unzipping the zipper in the dust cover. Remove the feet from the protective packaging.

STEP 3

Screw the feet into the holes as shown in the diagrams. Be careful not to over-tighten the feet as this may damage the furniture.

STEP 4

Carefully roll the furniture back on to its feet once they are all attached.

SPECIAL NOTES - IMPORTANT

There is one round plastic foot supplied which must be fitted as per the instructions. This foot supports the frame rail and not fitting it may cause the rail to bend.

Be sure to attach the plastic washer to all feet before screwing them into the holes. The washers secure the feet avoiding damage to the structure of your furniture.

In the bottom of each wooden foot is a plastic glide. Please check this for any fault or damage prior to rolling the furniture back onto its feet. If there is any sign of damage or any sharp surfaces you may risk scratching your floor. These glides are easily replaced if they become damaged and are readily available at most hardware stores. Damage caused to floors is not covered by your warranty.

Be sure to fit all feet to avoid compromising the structure of the lounge.