

Moco – Extendable Dining Table

Assembly Instructions

IMPORTANT: Please read these assembly instructions carefully before beginning assembly. Retain for future reference. CAUTION: This product is heavy. Assemble with the assistance of another adult. Do not assemble in the presence of children.



\searrow	N		en e			۲	\bigcirc
A. Main Legs	B. Legs	C. Table Top	D. Anchor Bolt	E. Bolts	F. Allen Key	G. Dome Cover	H. Washers
x1	x2	x1	x1	x4	x2	x2	x4

Step 1.

Undo the ends of the Anchor Bolt (D) in order to disassemble it – taking note of the order each of the pieces come apart. Re-assemble the Anchor Bolt through the holes in the Legs (B) and Main Legs (A) to fix all of the legs together. Cap the ends of the Anchor Belt with the Dome Cover (G)



Step 2.

Using two people, carefully turn the Table Top (C) over, and affix the assembled legs from Step 1 to the underside of the table top. Use a Bolt (E) and a Washer (H) in each of the 4 locations.







Moco – Extendable Dining Table

Assembly Instructions

Step 3.

Use two or more people to carefully upright the table. If required, the bottom of the legs can be adjusted to align suitably.



Step 4.

To extend the table, there are two safety latches under the mechanism. Release these to pull the table ends further apart – the middle section will pop up automatically when the table ends reach end of range. To fold the table back down, pull the table ends apart first and then allow them to retract back in as the middle section descends. Make sure to unlock the transit safety lock after transporting your table into place. If moving the table, re-apply the transit safety lock before moving.



