
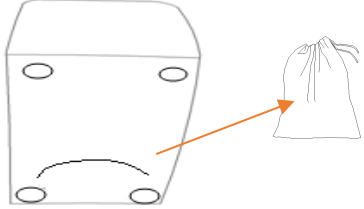
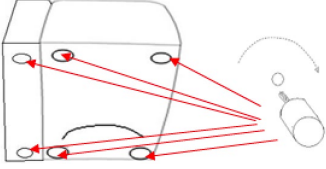
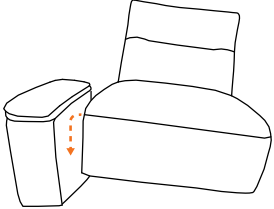
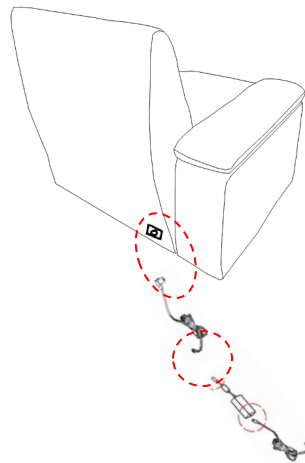



The components are heavy, assembly should be performed by two people.

 <h3>End Seat with Storage Armrest</h3>		
		
<p>1. Unzip the dust cover compartment in the bottom of the chair, remove the plastic legs and power supplies (if applicable) from the bag.</p>	<p>2. Attach the plastic legs with washers into the pre-drilled holes by hand-turning clockwise until firm. Do not overtighten.</p> <p>Also attach the two plastic legs for the armrest piece.</p>	<p>3. Lift the seat and slot the brackets down into the armrest to connect the two main pieces.</p>

Lastly, if you have purchased the Temple option with powered features – connect the power supply in the back of the end seat:


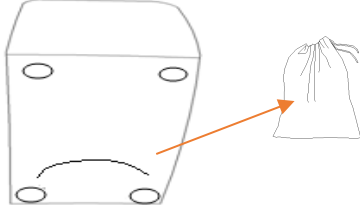
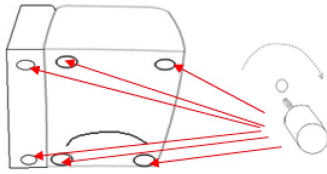
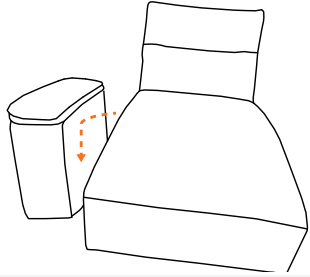


Hand Controller Buttons:

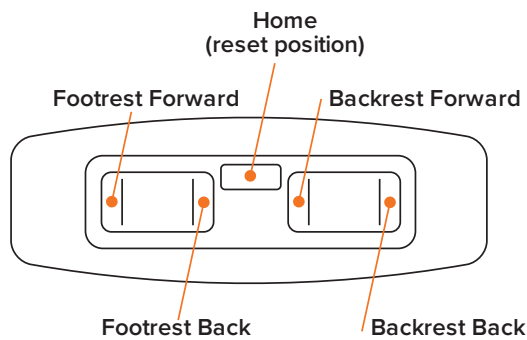


This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.


The components are heavy, assembly should be performed by two people.

 End Chaise Seat with Storage Armrest		
		
<p>1. Unzip the dust cover compartment in the bottom of the chair, remove the plastic legs and power supplies (if applicable) from the bag.</p>	<p>2. Attach the plastic legs with washers into the pre-drilled holes by hand-turning clockwise until firm. Do not overtighten.</p> <p>Also attach the two plastic legs for the armrest piece.</p>	<p>3. Lift the seat and slot the brackets down into the armrest to connect the two main pieces.</p>

Lastly, if you have purchased the Temple option with powered features – connect the power supply in the back of the end seat:

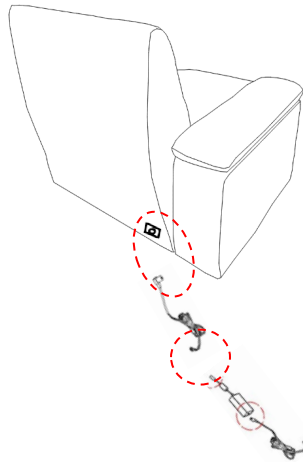

Hand Controller Buttons:

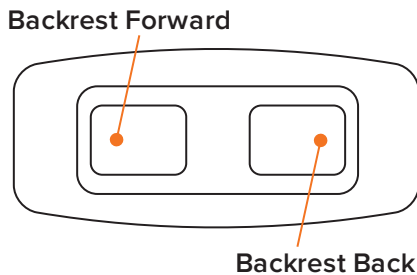


This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.


The components are heavy, assembly should be performed by two people.



Armless Chair

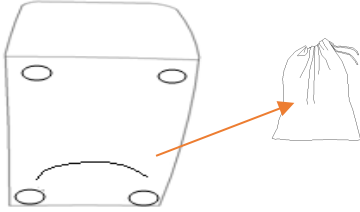


1. Unzip the dust cover compartment in the bottom of the chair, remove the plastic legs and power supplies (if applicable) from the bag.

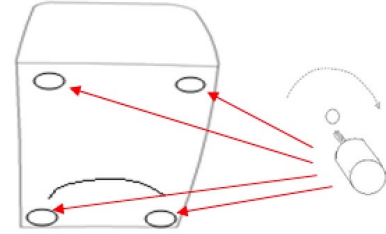


2. Attach the plastic legs with washers into the pre-drilled holes by hand-turning clockwise until firm. Do not overtighten.

Lastly, if you have purchased the Temple option with powered features – connect the power supply in the back of the end seat:

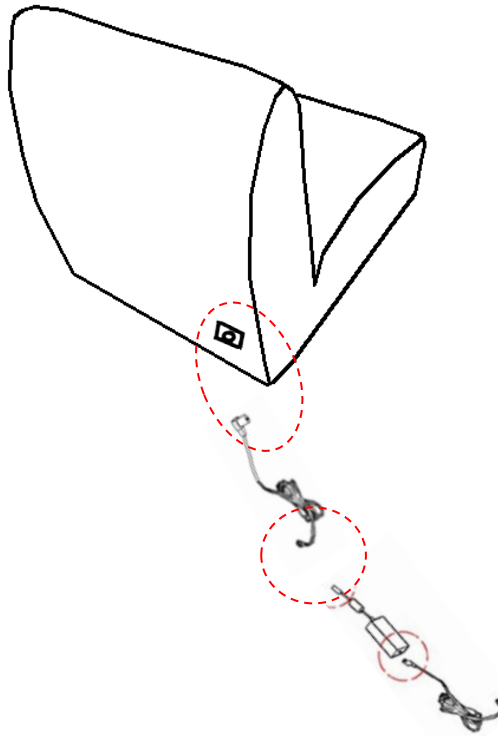


This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.


The components are heavy, assembly should be performed by two people.

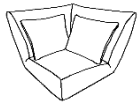

Corner Wedge

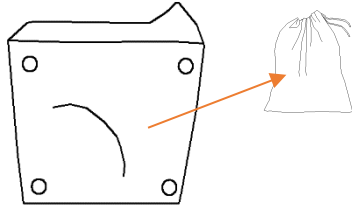

1. Unzip the dust cover compartment in the bottom of the chair, remove the plastic legs and power supplies (if applicable) from the bag.

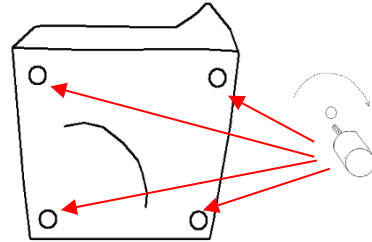


2. Attach the plastic legs with washers into the pre-drilled holes by hand-turning clockwise until firm. Do not overtighten.


The components are heavy, assembly should be performed by two people.



Consoles

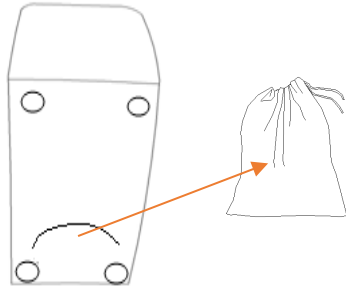


1. Unzip the dust cover compartment in the bottom of the chair, remove the plastic legs and power supplies (if applicable) from the bag.

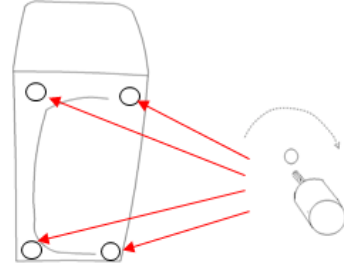

2. Attach the plastic legs with washers into the pre-drilled holes by hand-turning clockwise until firm. Do not overtighten.

Lastly – connect the power supply in the back of the console:

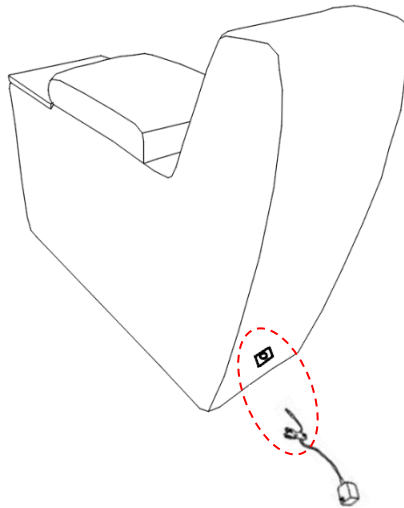

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.