

# synargy®

Furniture that fits your life

## ASSEMBLY INSTRUCTIONS



Model: 552439



### WARNING! ENTRAPMENT OR CRUSHING RISK

Ensure there is no person, animal or item obstructing the area under the footrest before operating this device.



## SAFETY INSTRUCTIONS

Please read these instructions carefully before operating.

- Ensure there is no person, animal or item obstructing the area under the footrest before operating this product.
- Improper use or installation may result in the risk of fire, electric shock and/or injury. We assume no liability for any eventual damages caused by improper use or inappropriate handling, or by any other non-compliance with the instructions in this manual.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the product.
- This product contains moving parts. Keep fingers, hair and body parts well clear from moving parts. To reduce the risk of injury, keep children and pets clear of the product when in use.
- Do not sit or place additional weight on the arms, back or open footrest.
- This product is very heavy. Only move this product by lifting the main body. Never drag by the footrest, back or arm rest.
- Return this product to the full upright position to stand safely and prevent a tripping hazard.
- Do not operate this product if damage is visible in any form.
- Do not modify or use unauthorised substitute parts.
- This product has been designed and intended for indoor residential use only. It is not suitable for commercial or outdoor use.
- This product is not intended to be used as part of a health care plan. Consult your medical professional before operating if you are taking medication or have physical limitations.
- Do not exceed the maximum 120kg per seat weight limit for this product.



## ELECTRICAL SAFETY

Please read these instructions carefully before operating.

- Never force the back or footrest to close faster than the electric motor.
- Before commencing cleaning or maintenance, ensure this product is disconnected from the power outlet and the back is in the full upright position.
- Disconnect this product from the power outlet before moving.
- Cease operation and disconnect from the power outlet if you ever detect a burning odour or smoke coming from the product.
- Do not operate this product if liquid spillage occurs on or around it. Disconnect from the power outlet and allow product to completely dry before reconnecting.
- Do not operate the power functions or charge station with wet hands.
- Check the condition of the power cord, electrical cords, transformer, plug and connector on a monthly basis. Do not operate if wear is visible.
- Ensure the power cord, electrical cords and transformer are clear of moving parts and not trapped underneath the base.
- Position the power cord to minimise a tripping hazard.
- Never attempt to open or disassemble electrical components.
- We recommend the use of a surge protector (not included).

## ASSEMBLY INSTRUCTIONS

Please read these instructions carefully before assembling.

1. Assemble this product in an open space with room to move.
2. Connect the seat backs to the bases by sliding the metal receivers on the seat back into the metal posts on the base (Figure 1). Ensure the correct seat back has been selected and that both sides align before pushing down firmly into place. The seat backs are heavy. Ask for help if you need assistance aligning the posts and receivers.

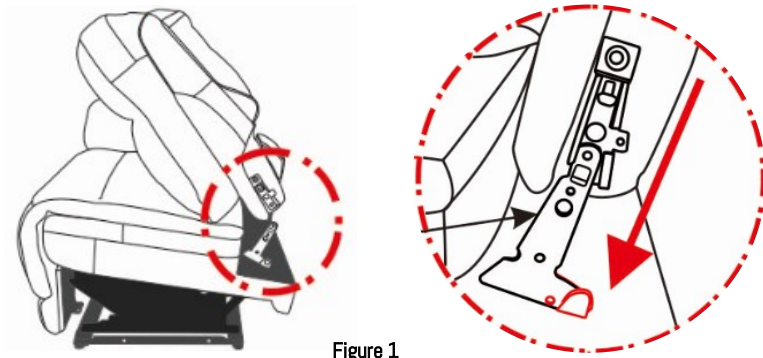


Figure 1

3. Connect one end of the power transformer to the rear of the suite and plug the other into a power outlet.
4. Your suite assembly is complete and it is now ready to be switched on at the wall.
5. Please read the safety and electrical instructions before operating.

## TROUBLESHOOTING

If you are having any issues please try the following solutions.

- Unplug the suite for 5 minutes to reset all electrical components.
- Check that all plugs are plugged into the power outlet and are secure. Please check that the power outlet is switched on.
- Check to ensure that all connection cords are properly connected, as per the step by step instructions. There are multiple connections, any of which being too loose may cause performance issues.
- Ensure no cords are pulled too tight. If the cord does not reach its destination with ease you may be trying to plug it into the wrong location. Please refer back to the step by step instructions to double check. If it is still too short/tight, please contact the store you purchased the suite from.
- Ensure there is nothing obstructing the recliner movement.
- Try plugging the suite into a different power outlet.
- Ensure the correct back is on the correct base – Eg: left back is on left base.
- Please check all connections before contacting the store for more help.

If the suite continues to fail please contact the store it was originally purchased from.

## ABOUT SYNARGY

Synargy is an established importer of innovative and on-trend furniture with a story to tell. In operation since 2001, Synargy is built on a lifetime of experience in the furniture industry, both in Australia and New Zealand. We pride ourselves on our superior products, systems and customer service. Our mission is to find 'Furniture that fits your life'.

