




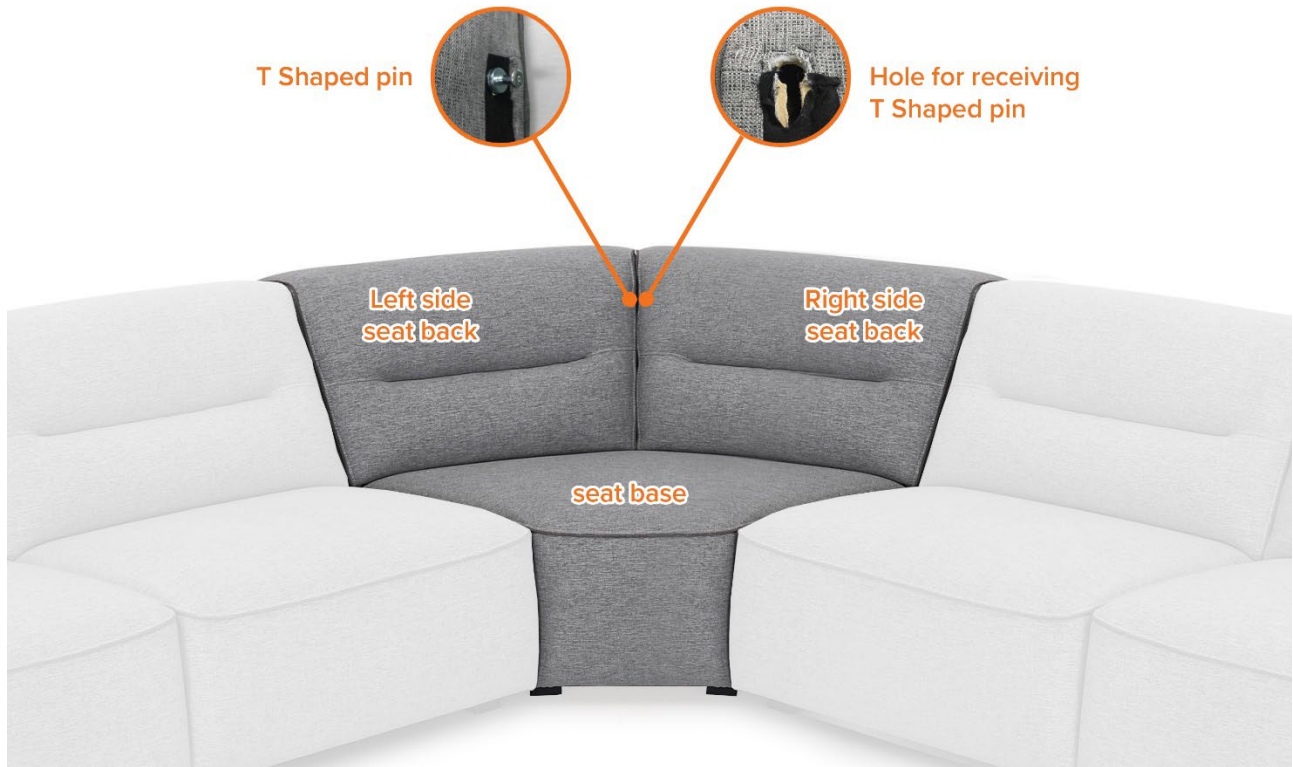
Corner Wedge 6386-W		
Part list		
A		4
B		5
C		1

Step 1:

Identify the Left and Right side seat backs. The Left seat back (when facing the lounge) will have a T shaped pin on the right-hand side of the seat back.

The Right seat back will have a hole for receiving the T shaped pin (in a later step) on the left-hand side of the seat back.

(see diagram below)

**Step 2:**

Locate the mounting holes on the back of the seat base. Place the Right side seat back on the base first. For each of the two mounting holes, push a bolt with washer from the underside of the seat base, and up through the seat back. You can rest the base and seat back sideways to allow better access to the underside of the base.



Gently tighten the bolt by hand at first to allow the thread to catch, then use the hex key to tighten fully when the bolt is aligned correctly (starts threading smoothly).

Step 3:

Set the lounge upright. Place the Left side seat back on the seat base, allowing the T shaped pin to enter the receiving hole of the Right side seat back. Press down firmly on the top of the seat back to lock the T shaped pin in place.

**Step 4:**

Affix the Left side seat back to the seat base using the bolts and washers, just as in Step 2.

